
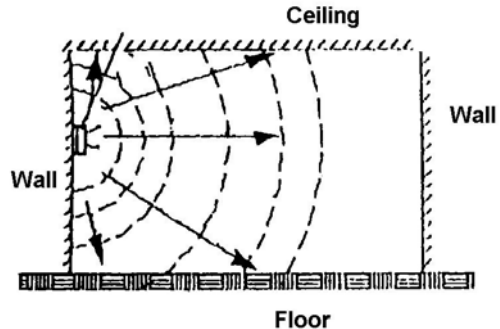


CPB-2000ATA & CPB-2000ATM Install Manual


NOTICE:

1. The functional coverage depends on the location and strength of the ambient mobile phone base stations.
2. Avoid placing the device near metal objects, as they will absorb radio wave and affect its performance.
3. Keep away from direct high temperature area.
4. Placing the device on higher position for better coverage. 2 meters height is recommended.

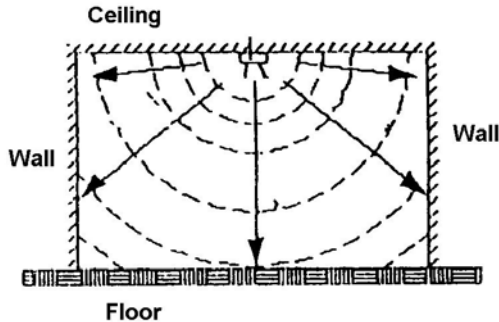


5. It started jamming after operating 2~10 sec.
6. The normal operational temperature is about 45°C. If the temperature is higher than the above, turn off the power immediately and contact local agent for help.

The Fixed Brace Parts

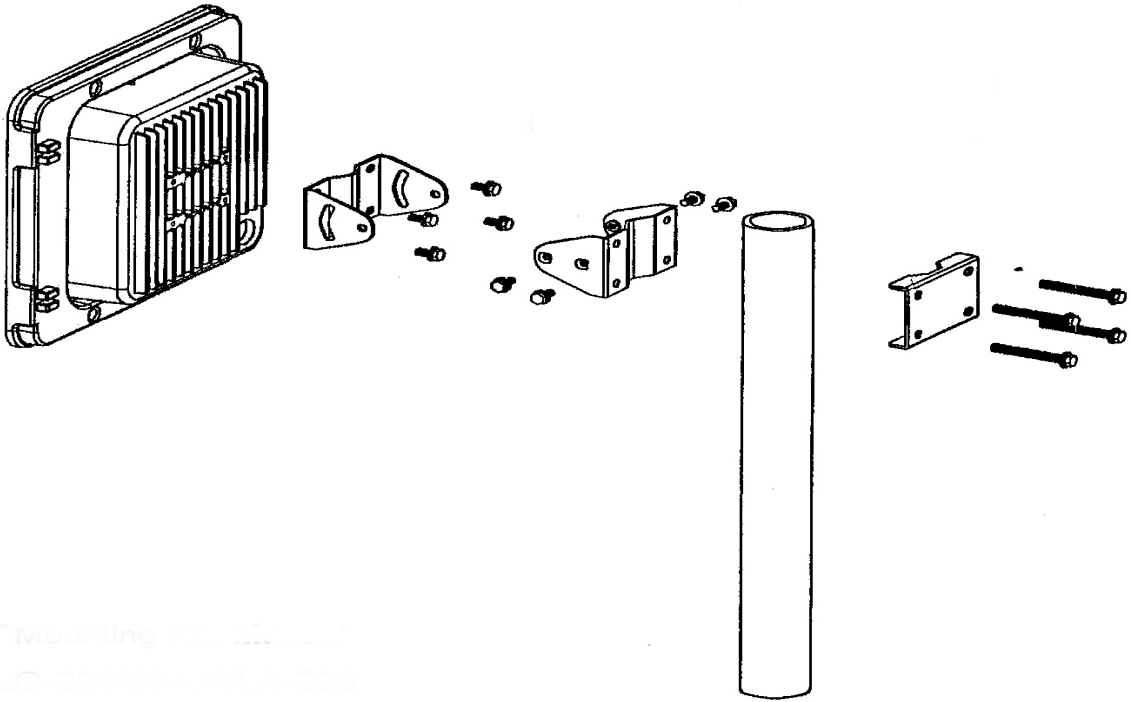


VLT Mounting Kit (VLT-200)
VLT-200/200-200


Main Unit with accessories

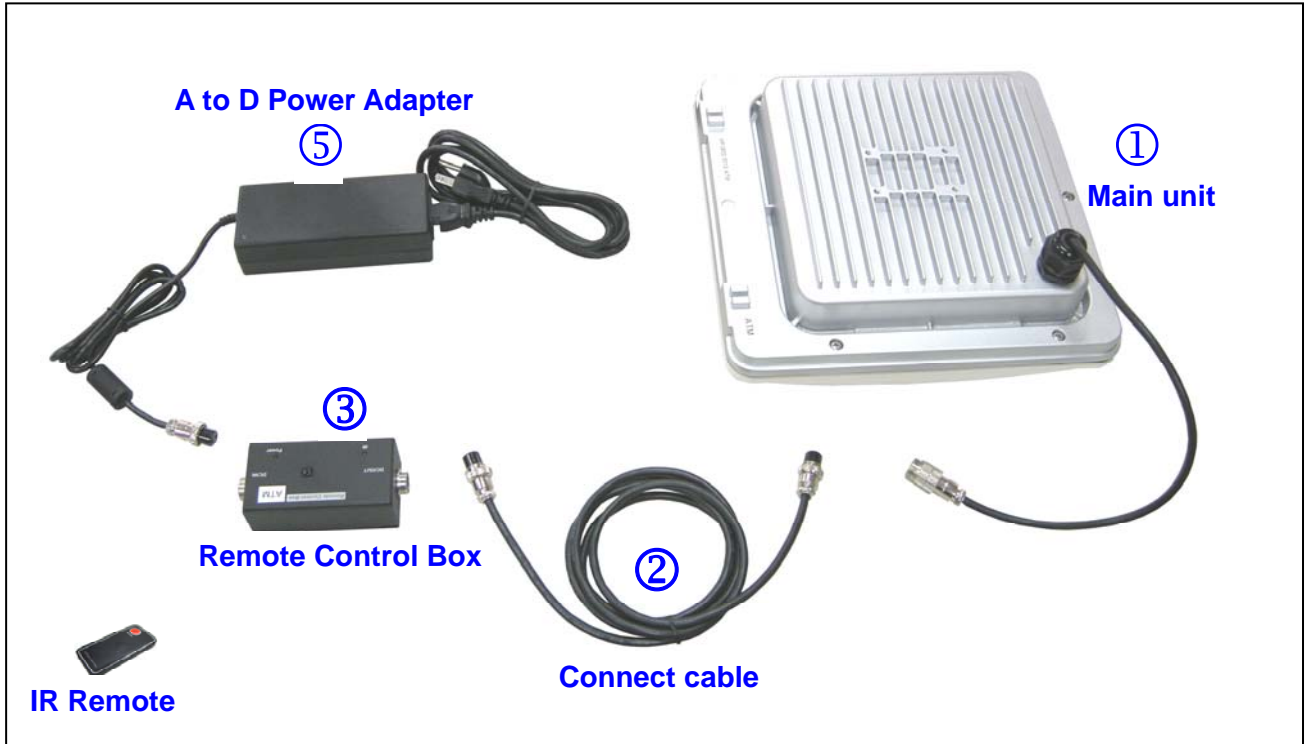

Step 1

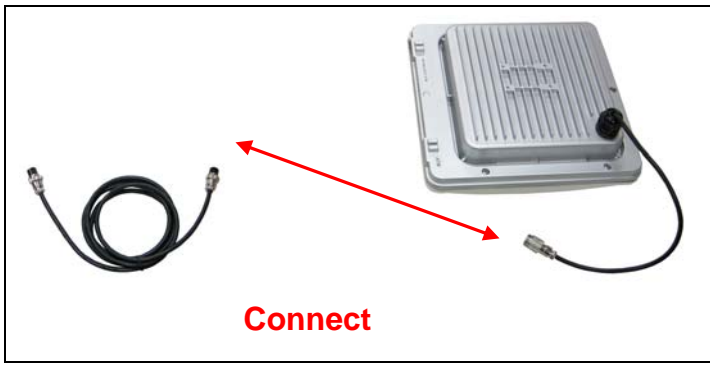

Step 2

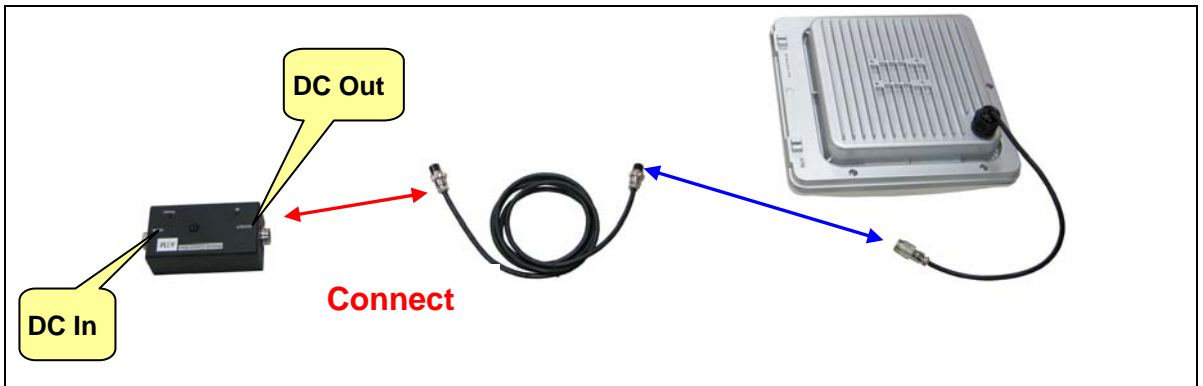

Step 3

